



INSTRUCTION MANUAL FOR BREAK BARREL AIR RIFLES



BEFORE USING YOUR
AIR RIFLE, READ ALL OF THIS
MANUAL CAREFULLY.

THE SAFETY SYSTEM



- If there is a safety system on your rifle it is safe.
- While safety is on the trigger cannot be pulled and the rifle will not shoot.

ATTENTION: Until you are completely ready to shoot keep rifle safety on.

MICRO ADJUSTABLE RIFLE SIGHT




With the micro adjustable rifle sight, the target hit point 'height' and 'right-left' can be adjusted.

The micro adjustable rifle sight can be adjusted with 0,1 mm moves and gives 1 mm deviation on a ten-meter target.

RIFLE SIGHT RIGHT-LEFT TUNING



- If the shot hits the left of the target, turn the right-left drum clockwise. (pic.1)
- If the shot hits the right of the target, turn the right-left drum anti-clockwise. (pic.1)

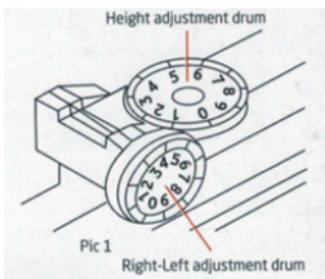

RIFLE SIGHT RIGHT-LEFT TUNING



- If the shot hits above the target, turn the height-tune drum clockwise. (pic.1)
- If the shot hits below the target, turn the right-left drum anti-clockwise. (pic.1)

INSTRUCTIONS FOR USING THE RIFLE

SETTING UP THE RIFLE



With one hand hold the handgrip and with the other holding the barrel pull downwards till the rifle is set. (pic.2&3)
You will hear a 'click' sound when it is set.



Pic 2

ATTENTION: DO NOT KEEP THE RIFLE SET UP FOR LONG WHILE. THIS WILL MAKE THE RIFLE SPRING WEAR IN SHORT TIME AND THE RIFLE PERFORMANCE WILL REDUCE.



Pic 3


PUTTING SHOTS IN THE RIFLE



Place one shot in the rifle as shown in the Picture 4.

ATTENTION: If your rifle is 4.5 mm caliber use 4.5 mm shots and if 5.5 mm caliber use 5.5 mm shots.

-Each rifle shot is disposable. So, do not use same shot more than once. To gain maximum performance from your rifle use good quality and produce shots.

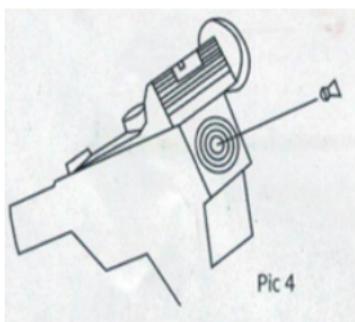


Pic 4

SHOOTING THE RIFLE



- Totally close the barrel. (Pic.5) When totally closed you will hear a 'click' sound.
- Aim to safe target and if there is a safety system on your rifle, position it off and get ready to shoot. (Pic.6)
- Slightly pull the trigger and the rifle should shoot. To aim properly, match the front sight exactly in the middle of the hindsight socket and aim below the target. When having taken the aim correctly, the right view that shooter should see is as Picture 7.

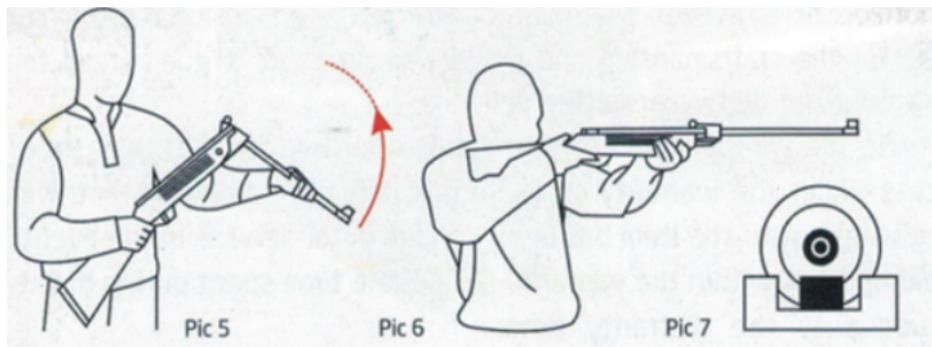

THE MAINTENANCE AND GREASING OF THE RIFLE

- If you have not used your rifle periodically for a long time or have used it in very dusty or very humid atmospheres, it is vitally important and necessary to grease your rifle.
- It is important to clean and grease your rifle once in every 250 shots.
- With a ramrod and piece of cloth it is suggested you clean the barrel once in every 500 shots.

- It is necessary that the rifle be empty and dry before cleaning and greasing.
- Always be sure the rifle and the barrel are clean.
- If substances like water, sand, dirt get into the interior mechanism of the rifle, do not use it and take it to a rifle mechanic to have it fully cleaned.
- In the event of not keeping your rifle clean and ready, dangerous occasions may appear.

SAFETY WARNINGS

- This air rifle will shoot when set up, shots loaded, if there is when the safety is off, the trigger pulled.
- Before starting to use our air rifle, learn how it works and what the necessary safety precautions are.
- Even if the rifle is unloaded, do not aim the rifle to anything that you have no intention to. Always keep the barrel in direction of safety.
- Never pull the rifle towards yourself holding the barrel.
- Always aim to safe targets. Not to cause any injuries or damage, in case of not hitting the target think of where it would lead to.
- Be sure of your target before you shoot and never shoot towards sounds.
- Never shoot the water or targets that can cause the shots to bounce back.
- If you are not going to shoot, never load with shots.
- Do not walk, run, jump with a loaded and set up rifle.
- When carrying your rifle, be sure that it is unloaded and in safe condition.
- Do not disassemble and try to change the rifle parts.
- The user is completely responsible off all the injuries and damages that can emerge from using the wrong, faulty, carelessly and ill-mannered.

WARRANTY

This product has been properly used in accordance with 'the usage and care instructions of the rifle' in the instruction manual. Providing that the product has not been mended or gone through any process other than any of the officials authorized by Salix Arms, for craftsmanship and production faults, it is guaranteed for two years after delivery.

No fee will be asked for the craftsmanship cost, spare parts or any other process under the warranty of these products. The mending time will be mostly three weeks after the item has been handed in for service. In the event of the item breaking down within the warranty period, the time spent during maintenance will be added to the warranty time.

The user of the product, sent for maintenance is responsible for the transport and cargo expenses. Documents that are not fully completed and not signed by the seller company will be invalid. The buyer of this product will be considered to have accepted the conditions above.

Thank You

Thank you for purchasing this shotgun this shotgun with Salix Arms. We are sure this gun will bring you years of hunting and/or shooting pleasure. Your satisfaction is the key to our success. Please let us know if we can be of service and relay any observations about your guns performance or appearance.

Dealer Stamp

Salix
A R M S



Model: _____
Serial No: _____
Date: _____

This warranty card is confirmation that you bought your gun from an approved Salix Arms retailer/service centre and confirms that you will get our comprehensive 2 years warranty from the date purchase.

www.salixarms.com export@salixarms.com



www.salixarms.com

